


# User Manual

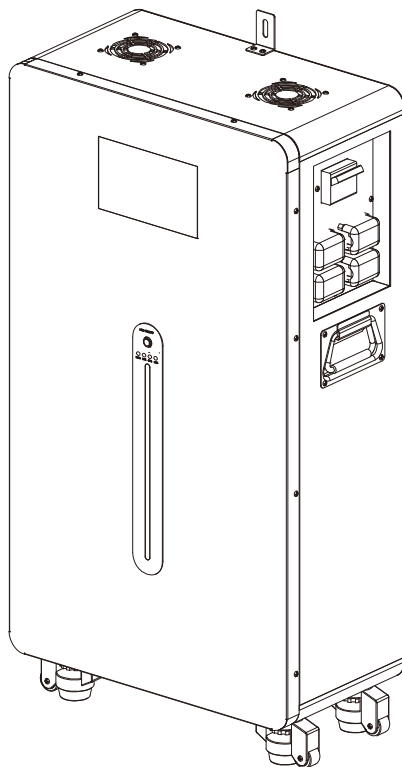

51.2V 280AH

## LiFePO4 BATTERY

Thank you for choosing our product.


Before using the product, please read the following precautions carefully to avoid damage or errors.

1. INTRODUCTION

1.1. Before Using The Battery

Thank you for choosing our energy storage system.

- This manual provides information regarding safety precautions to prevent possible accidents and how to use the product. Please read this manual carefully before use for safety and keep this manual handy for reference. Work on the lithium battery should be carried out by qualified personnel only.
- Please note the warning sign on the battery, do not tear up or destroy the warning labels.
- Please charge the battery to full before putting in service, using an appropriate charger.

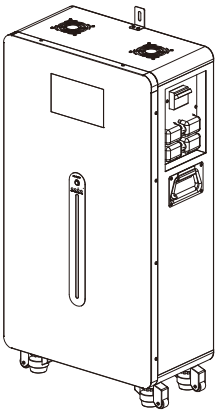

1.2. Safety Precautions

Our products are designed with full consideration of safety. However, all electrical appliances can be dangerous if used inappropriately; it can cause a fire or electric shock that leads to severe injury or death. For your protection, please read these safety precautions thoroughly.

Definitions of Symbols:

Below are symbols used in this manual and the unit.

Please read through the following definitions before reading the manual.

|                                                                                     |                |                                                                                                                               |
|-------------------------------------------------------------------------------------|----------------|-------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Warning</b> | If you ignore these instructions, it can lead to a fire or electric shock causing serious injury or death.                    |
|  | <b>Caution</b> | If you ignore these instructions, it can lead to electric shock or other accidents causing injury or harm to nearby products. |



Warning

If you do not follow the instructions below, it can lead to a fire or electric shock causing serious injury or death.

| Do                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Do not                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><div>✓</div><div>Use designated cable. A non-designated cable use can cause electric shock. Be sure to use the cable designated in this manual.</div></div> <div><div>✓</div><div>Connect a power cable and communication cable properly.<div>1. If you connect a power cable improperly, contact resistance will increase and it may damage the parts or cause a fire.</div><div>2. Insert the connector of the communication cable all the way in. If it is connected improperly, the system may be deactivated.</div></div></div> <div><div>✓</div><div>Wear insulating gloves and protection glasses during installation and connection of the set to prevent electric shock or other injuries.</div></div> <div><div>✓</div><div>Install in a stable place.<div>Do not install upside down or sideways.</div><div>The set may drop and cause injury.</div></div></div> | <div><div>✗</div><div>Do not damage cables. If you damage a cable, it can cause a fire or electric shock.<div>1. Do not work over or damage a cable.</div><div>2. Do not place heavy objects on a cable or pull the cable.</div><div>3. Do not place a heater near the cable, which may result in the cable overheating.</div><div>4. Do not tuck down a cable when installing in a rack.</div><div>5. When you unplug a communication cable, be sure to hold the plug and pull it.</div></div></div> <div><div>✗</div><div>Do not install in a closed area. If the module/controller is installed in a closed area with no air-conditioning, heat may build up inside the set and cause a fire.</div></div> <div><div>✗</div><div>Do not place the set in direct sunlight or near a heater. Doing so can cause deformation, a breakdown, Pay extra attention when you place the set near windows.</div></div> |

| Do                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Do not                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"><li>✓ Install other equipment or accessories properly. If you inadequately install other equipment or accessories sold separately, they may fall and cause injury. When you install any of the following accessories, install it properly based on this manual.</li><li>✓ Power off at a malfunction In case any malfunction happens, please turn off the POWER ON/OFF switch in order to shut down, and remove the power connector from the POWER CONNECTOR terminal of the module.</li><li>✓ Follow related laws or ordinances for disposal. When you dispose of this product, do not dispose as general or household waste.</li><li>✓ Disposal with specified method Contact technical vendor when you discard. Do not disassemble, destroy, or disposal in the fire.</li></ul> | <ul style="list-style-type: none"><li>✗ Do not install the set where excessive oil smoke, steam, moisture or dust is contained in the air.</li><li>✗ Do not allow water and/or foreign objects inside the module . Should this occur, however, turn off the "POWER ON/OFF" switch on the controller to shut down, and remove the power connector from the POWER CONNECTOR terminal of the module.</li></ul> |



Caution

If you ignore any of the following instructions, it can cause injury or damage to nearby products.



**Danger**

If liquid is leaking from the module, observe the following measures.

| Do                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Do not                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Precautions for Use</b></p> <ul style="list-style-type: none"><li>■ In the case of a failure, or any of the abnormalities shown below, turn off the set and contact customer services.<ol style="list-style-type: none"><li>1. Abnormal sound, smell or smoke.</li><li>2. Water or particles inside the product.</li><li>3. The product is dropped, or the cabinet is damaged.</li></ol></li><li>■ Charge and discharge the product according to the control signals of the controller. Do not hammer a nail or punch a hole in the product.</li><li>■ Replace the module with a new one if discharge time at room temperature is noticeably short, even from fully charged.</li></ul> | <ul style="list-style-type: none"><li>■ Disassemble.</li><li>■ Modify the product (Modification may destroy the protection function inside, or cause abnormal charge/ discharge, heat generation, gas eruption, or fire ).</li><li>■ Touch the rear output terminal except for installation.</li><li>■ Throw the product into fire or heat, or otherwise expose the set to heat or naked flame.</li><li>■ Submerge the product in liquid or allow it to become wet.</li><li>■ Apply strong shock, crush, or drop.</li><li>■ Place any foreign objects inside.</li><li>■ Connect any devices that exceed the operating voltage and current range.</li><li>■ Do not unplug the power connector from the POWER CONNECTOR terminal while power is turned on.</li></ul> |

## 2. SPECIFICATION AND FUNCTIONS

---

### 2.1. Basic functions

- \* SOC self-learning
- \* Customized APP
- \* Buzzer alarm
- \* Low power consumption design
- \* Anti-ignition function
- \* 10 temperature sampling
- \* LED status indication
- \* Data storage function
- \* Multiple units can be used in parallel
- \* Customized communication protocol
- \* Adaptive communication in parallel
- \* High-precision current sampling
- \* PWM pre-charging technology
- \* Intelligent balance management technology
- \* APP online upgrade function
- \* One-key start, one-key switch shipping mode
- \* Isolated communication: two independent RS485, two independent CAN
- \* Bluetooth, 4G modules are reserved for external connections
- \* Screen: Reserved for button screen and touch screen
- \* Parallel automatic address assignment function, automatic identification of host function
- \* APP can support CAN, RS485, wireless (4G, WIFI, BCE) monitoring and online upgrade
- \* Short circuit protection, over-charge, over-discharge, under-voltage, over-current, over-temperature, low temperature, differential pressure alarm and protection

2.2. Nominal technical parameters

| S/N | Project                          |                              | Parameter | Remark                       |
|-----|----------------------------------|------------------------------|-----------|------------------------------|
| 1   | Nominal Voltage                  |                              | 51.2V     |                              |
| 2   | Nominal Capacity                 |                              | 280AH     |                              |
| 3   | Maximum charge/discharge current | Continuous charge/discharge  | 140A/140A |                              |
|     |                                  | Pulse Charge/Discharge (30s) | 300A/300A |                              |
| 4   | The SOC window is recommended    |                              | 5~100%    | N.A.                         |
| 5   | Charging operating temperature   |                              | 0℃~60℃    | N.A.                         |
| 6   | Discharge operating temperature  |                              | -30℃~60℃  |                              |
| 7   | Storage temperature              | Short-term (within 1 month)  | -20℃~45℃  |                              |
|     |                                  | Long-term (within 1 year)    | 0℃~35℃    |                              |
| 8   | Store humidity                   |                              | <90%      |                              |
| 9   | Monthly self-discharge rate      |                              | <3%/month | (25±2)℃, 30%~50% SOC storage |
| 10  | Recommended charging current     |                              | ≤140A     |                              |
| 11  | Maximum charging voltage         |                              | 58.4V     |                              |
| 12  | Floating charging voltage        |                              | 58.4V     |                              |
| 13  | Cycle life                       |                              | ≥6000     |                              |

Test environmental conditions


Temperature: (25±2)℃

Relative humidity: 15%~90%


2.3. Dimensions

51.2V 280AH

Unit:mm

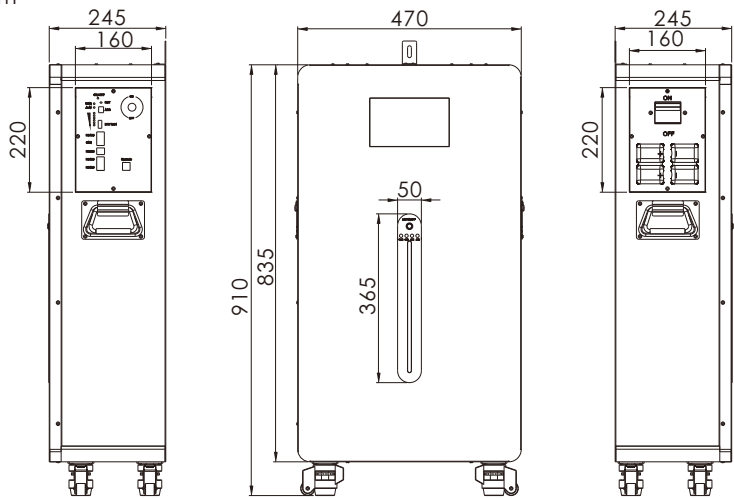

2.4. Panel indication

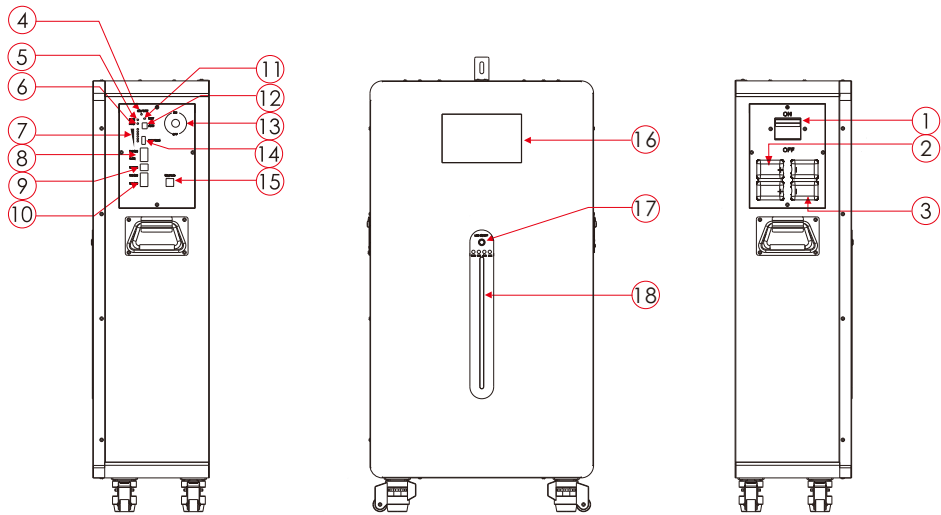

Side view

Front view

Side view

| Item | Model                               | Item | Model                                      |
|------|-------------------------------------|------|--------------------------------------------|
| 1    | Air switch                          | 11   | Reset button                               |
| 2    | Port Positive *2                    | 12   | Dial code                                  |
| 3    | Port Negative *2                    | 13   | Switch                                     |
| 4    | On/off LED indicator                | 14   | dry contact                                |
| 5    | "RUN" indicator                     | 15   | The screen is upgraded to the network port |
| 6    | ALM indicator                       | 16   | Display screen                             |
| 7    | Power indicator light               | 17   | LED Switch                                 |
| 8    | RS485 port and CAN port             | 18   | Battery level display                      |
| 9    | RS232 interface                     |      |                                            |
| 10   | RS485 Parallel communication port*2 |      |                                            |

## 2.5. LED indication instructions

### 2.5.1. LED operating status indication

| State     | Normal/Alarm/Protection                                              | RUN                                                                               | ALM                                                                               | Battery level indicator LED                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   | Illustrate                                                                                                  |
|-----------|----------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
|           |                                                                      |  |  |              |  |  |  |  |  |                                                                                                             |
| Shutdown  | Dormancy                                                             | no                                                                                | no                                                                                | no                                                                                            | no                                                                                | no                                                                                | no                                                                                | no                                                                                | no                                                                                | Completely extinguished                                                                                     |
| Standby   | Normal                                                               | Flash 1                                                                           | no                                                                                | According to the indication of the power level                                                |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   | Standby state                                                                                               |
|           | Alarm                                                                | Flash 1                                                                           | no                                                                                |                                                                                               |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   | Module low voltage                                                                                          |
| Charge    | Normal                                                               | Continuous                                                                        | no                                                                                | According to the battery level indication<br>( battery level indication up to LED flashing 2) |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   | The maximum battery LED flashes (flashes 2) and the ALM does not flash when the overcharge alarm is alarmed |
|           | Alarm                                                                | Continuous                                                                        | no                                                                                |                                                                                               |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                                             |
|           | Overcharge protection                                                | Continuous                                                                        | no                                                                                | Continuous                                                                                    | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        | If there is no mains power, it will be turned into standby                                                  |
|           | Temperature, overcurrent, fail-safe                                  | no                                                                                | Continuous                                                                        | no                                                                                            | no                                                                                | no                                                                                | no                                                                                | no                                                                                | no                                                                                | Stop charging                                                                                               |
| Discharge | Normal                                                               | Flash 3                                                                           | no                                                                                | According to the indication of the power level                                                |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                                             |
|           | Alarm                                                                | Flash 3                                                                           | no                                                                                |                                                                                               |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                                             |
|           | Undervoltage protection                                              | no                                                                                | no                                                                                | no                                                                                            | no                                                                                | no                                                                                | no                                                                                | no                                                                                | no                                                                                | Stop discharging                                                                                            |
|           | Temperature, overcurrent, short circuit, reverse polarity, fail-safe | no                                                                                | Continuous                                                                        | no                                                                                            | no                                                                                | no                                                                                | no                                                                                | no                                                                                | no                                                                                | Stop discharging                                                                                            |
| Lapse     |                                                                      | no                                                                                | Continuous                                                                        | no                                                                                            | no                                                                                | no                                                                                | no                                                                                | no                                                                                | no                                                                                | Stop charging and discharging                                                                               |

### 2.5.2. Capacity indication

| State                                                                                                 |         | Charge                                                                              |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------------------------|---------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Capacity indicator                                                                                    |         | L6                                                                                  | L5                                                                                  | L4                                                                                  | L3                                                                                  | L2                                                                                  | L1                                                                                  |
|                                                                                                       |         |  |  |  |  |  |  |
| Electricity                                                                                           | 0~17%   | no                                                                                  | no                                                                                  | no                                                                                  | no                                                                                  | no                                                                                  | Flash 2                                                                             |
|                                                                                                       | 18~33%  | no                                                                                  | no                                                                                  | no                                                                                  | no                                                                                  | Flash 2                                                                             | Continuous                                                                          |
|                                                                                                       | 34~50%  | no                                                                                  | no                                                                                  | no                                                                                  | Flash 2                                                                             | Continuous                                                                          | Continuous                                                                          |
|                                                                                                       | 51~66%  | no                                                                                  | no                                                                                  | Flash 2                                                                             | Continuous                                                                          | Continuous                                                                          | Continuous                                                                          |
|                                                                                                       | 67~83%  | no                                                                                  | Flash 2                                                                             | Continuous                                                                          | Continuous                                                                          | Continuous                                                                          | Continuous                                                                          |
|                                                                                                       | 84~100% | Flash 2                                                                             | Continuous                                                                          | Continuous                                                                          | Continuous                                                                          | Continuous                                                                          | Continuous                                                                          |
| Running indicator  |         | Continuous                                                                          |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |

| State                                                                                               |         | Discharge                                                                         |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   |
|-----------------------------------------------------------------------------------------------------|---------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Capacity indicator                                                                                  |         | L6                                                                                | L5                                                                                | L4                                                                                | L3                                                                                | L2                                                                                | L1                                                                                |
|                                                                                                     |         |  |  |  |  |  |  |
| Electricity                                                                                         | 0~17%   | no                                                                                | no                                                                                | no                                                                                | no                                                                                | no                                                                                | Continuous                                                                        |
|                                                                                                     | 18~33%  | no                                                                                | no                                                                                | no                                                                                | no                                                                                | Continuous                                                                        | Continuous                                                                        |
|                                                                                                     | 34~50%  | no                                                                                | no                                                                                | no                                                                                | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        |
|                                                                                                     | 51~66%  | no                                                                                | no                                                                                | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        |
|                                                                                                     | 67~83%  | no                                                                                | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        |
|                                                                                                     | 84~100% | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        | Continuous                                                                        |
| Running indicator  |         | Flash 3                                                                           |                                                                                   |                                                                                   |                                                                                   |                                                                                   |                                                                                   |

2.5.3. LED Flash Status

| Status  | On    | Off   |
|---------|-------|-------|
| Flash 1 | 0.25s | 3.75s |
| Flash 2 | 0.5s  | 0.5s  |
| Flash 3 | 0.5s  | 1.5s  |

3. CHARGING AND DISCHARGE

3.1. Charging

- Please use a special charger for LiFePo4 battery which matches the specific battery parameters.
- Please refer to the battery datasheet for more information about charging.
- Charge the battery under the environment temperature range from 0°C to 55°C. Try to keep the temperature close to 25°C for best performance/lifespan ratio. Note that due to internal protection, the battery will not charge under temperatures below -20°C.
- The charging process and time should be observed, otherwise, overcharge may occur and can lead to shortening of the battery lifespan and cause a safety hazard.

### 3.2. Discharge


- Please refer to your battery datasheet for the maximum rate of discharge for your specific battery model.
- LiFePo4 batteries can be discharged up to 100% of their capacity. However, to optimize the performance of your LiFePo4 battery, and to avoid the BMS disconnecting the battery, we recommend limiting the discharge to 20%.
- Discharge the battery under the environment temperature range from -20°C to 55°C. Try to keep the temperature close to 25°C for best performance/lifespan ratio.

## 4. INSTALLATION AND OPERATION

- Make sure the lithium battery's positive and negative electrode are connected correctly to the load/appliance.
- Please charge the battery to full before putting in service, using an appropriate charger.
- It is advisable to protect the battery with a fuse.
- Do not connect the battery in series or parallel with other batteries if not specifically indicated in the datasheet.


### 4.1. Installation Guide

The installation method is shown in the figure:

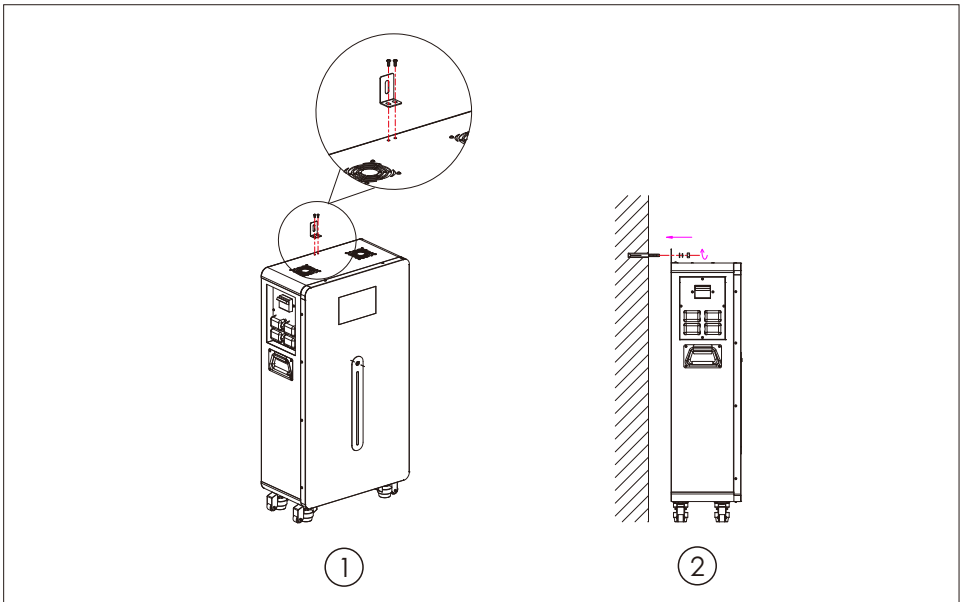

4.2.DC Cable Connection


4.2.1. Single Unit

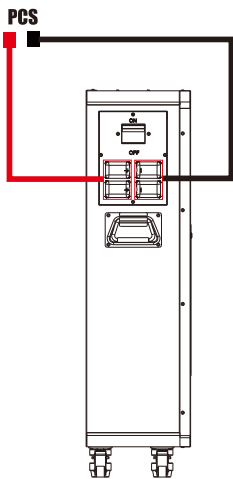

Single Unit Connection

4.2.2. Multi-Units in Parallel (4 sets as an example)

Max. Number Of Parallel: 6 Sets

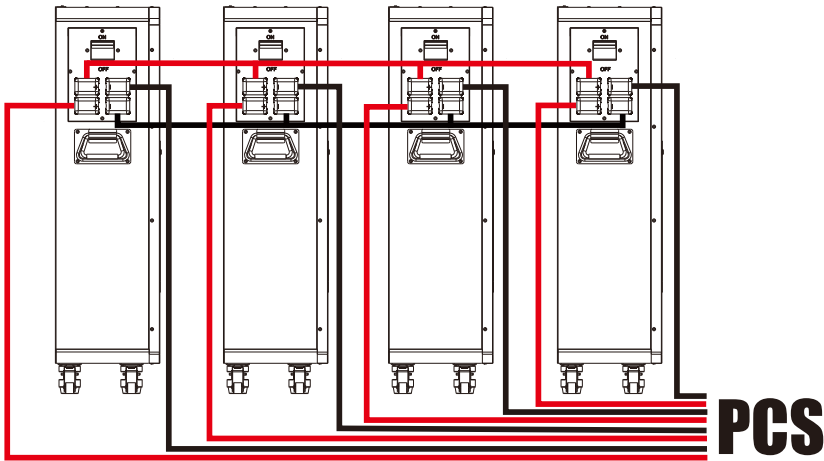


Multi-Units Connection

Master Pack and Slave Pack can be used as single unit as well as multi-units (in parallel) mode. The customer must inform supplier if multi-units mode is required.

5. Bluetooth Communication

APP interface content

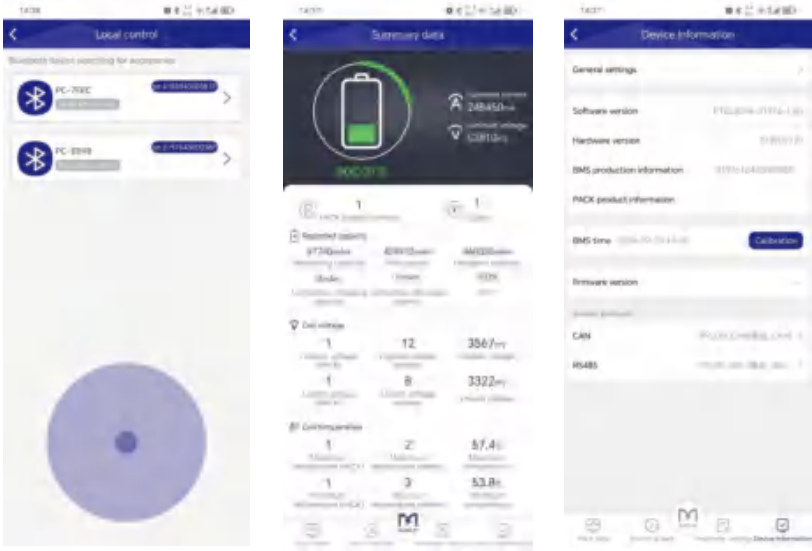

Bluetooth Communication

The BMS can communicate with the Peicheng Bluetooth APP through Bluetooth, so as to monitor various information of the battery in the Bluetooth APP, including battery voltage, current, temperature, status, SOC, SOH and battery production information, etc., and the default baud rate is 9600bps.

## 6. RESET BUTTON DESCRIPTION

---

- When the BMS is in the sleep state, press the button (3~6S) and release it, the protection board is activated, and the LED indicator lights up sequentially for 0.5 seconds from "RUN".
- When the BMS is active, press the button (3~6S) and release it, the protection board is asleep, and the LED indicator lights up for 0.5 seconds from the lowest battery light.
- When the BMS is active, release it after pressing the button (6~10S), the protection board is reset, and all the LED lights are lit up at the same time for 1.5 seconds.

After the BMS is reset, the parameters and functions set by the host computer will still be retained. If it is necessary to restore the initial parameters, it can be achieved by "restore default values" of the host computer, but the relevant operating records and storage data will remain unchanged (such as battery power, number of cycles , protecting records, etc.).

## 7. SLEEP AND WAKE UP

---

### 7.1 Hibernate

When any of the following conditions is met, the system enters low-power mode:

- 1) The individual or overall over-discharge protection is not released within 30 seconds.
- 2) Press the button (3~6S) and release the button.
- 3) The lowest cell voltage is lower than the sleep voltage, and the duration reaches the sleep delay time (while satisfying no communication, no protection, no balancing, and no current).
- 4) Standby time exceeds 24 hours (no communication, no charging and discharging, no mains power).
- 5) Force shutdown through the host computer software.

Before entering sleep mode, make sure that the input terminal is not connected to external voltage, otherwise it will not be able to enter low-power mode.

### 7.2 Wake up

When the system is in low-power mode and any of the following conditions is met, the system will exit the low-power mode and enter the normal operating mode:

- 1) Connect to the charger, the charger output voltage must be greater than 48V.
- 2) Press the button (3~6S) and release the button.
- 3) With RS232 activation.

## 8. COMMUNICATION SPECIFICATION

---

### 8.1 RS232 communication

The BMS can communicate with the host computer through the RS232 interface, so that the host computer can monitor various information of the battery, including battery voltage, current, temperature, status and battery production information, etc., and the default baud rate is 9600bps.

### 8.2 CAN communication

The default baud rate is 500K. This interface is used to communicate with the inverter. When the battery is the host, it can aggregate slave data and communicate with the inverter.

### 8.3 Parallel RS485 communication

You can view PACK information. The default baud rate is 9600bps. If you need to communicate with the monitoring device through RS485, the monitoring device serves as the host and polls data according to the address. The address setting range is 2~15.

### 8.4 Independent RS485 communication

The default baud rate is 9600bps. This interface is used to communicate with the inverter. When the battery is the host, it can aggregate slave data and communicate with the inverter.

### 8.5 Bluetooth communication


BMS can communicate with Peicheng Bluetooth APP through Bluetooth, thereby monitoring various battery information on the Bluetooth APP, including battery voltage, current, temperature, status, SOC, SOH and battery production information, etc. The default baud rate is 9600bps.

### 8.6 WiFi communication

Press and hold the reset button for 10-13 seconds. After all the lights are on and it changes to a state with only one light on (excluding ON/OFF lights), release it. Wait for 8 seconds to see the new device in the device section of the APP for adding.

8.6 DIP switch setting

When PACKs are used in parallel, different PACKs can be distinguished by setting the address using the DIP switch on the BMS. It is necessary to avoid setting the same address. For the definition of the BMS DIP switch, please refer to the table below. In parallel mode, the default DIP address is 1. for the host.



| Address | DIP switch position |     |     |     |
|---------|---------------------|-----|-----|-----|
|         | #1                  | #2  | #3  | #4  |
| 1       | ON                  | OFF | OFF | OFF |
| 2       | OFF                 | ON  | OFF | OFF |
| 3       | ON                  | ON  | OFF | OFF |
| 4       | OFF                 | OFF | ON  | OFF |
| 5       | ON                  | OFF | ON  | OFF |
| 6       | OFF                 | ON  | ON  | OFF |
| 7       | ON                  | ON  | ON  | OFF |
| 8       | OFF                 | OFF | OFF | ON  |
| 9       | ON                  | OFF | OFF | ON  |
| 10      | OFF                 | ON  | OFF | ON  |
| 11      | ON                  | ON  | OFF | ON  |
| 12      | OFF                 | OFF | ON  | ON  |
| 13      | ON                  | OFF | ON  | ON  |
| 14      | OFF                 | ON  | ON  | ON  |
| 15      | ON                  | ON  | ON  | ON  |

9. INTERFACE DEFINITION


9.1 Interface diagram




CAN and RS485 interface



Dry contact

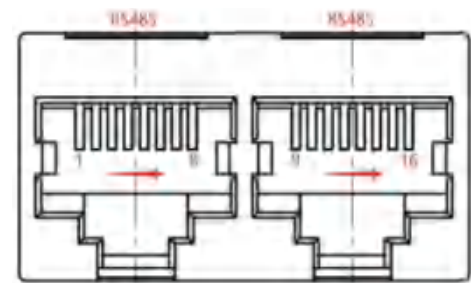

Parallel communication port

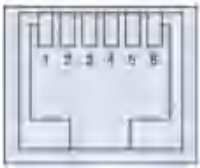

RS232 communication interface

9.2 Definition of electrical interface

| RS232--using 6P6C vertical RJ11 socket |                   |
|----------------------------------------|-------------------|
| RJ11 pin                               | Definition        |
| 1、2、6                                  | NC                |
| 3                                      | TX (single board) |
| 4                                      | RX (single board) |
| 5                                      | GND               |

| CAN--using 8P8C vertical RJ45 socket |            | RS485--using 8P8C vertical RJ45 socket |            |
|--------------------------------------|------------|----------------------------------------|------------|
| Rj45 pin                             | Definition | Rj45 pin                               | Definition |
| 1, 3, 6, 7, 8                        | NC         | 9, 16                                  | RS485-B1   |
| 4                                    | CAN-H      | 10, 15                                 | RS485-A1   |
| 5                                    | CAN-L      | 11,14                                  | GND        |
| 2                                    | GND        | 12, 13                                 | NC         |


CAN and RS485 interface

| RS485--using 8P8C vertical RJ45 socket |            | RS485--using 8P8C vertical RJ45 socket |            |
|----------------------------------------|------------|----------------------------------------|------------|
| Rj45 pin                               | Definition | Rj45 pin                               | Definition |
| 1,8                                    | RS485-B    | 9, 16                                  | RS485-B    |
| 2, 7                                   | RS485-A    | 10, 15                                 | RS485-A    |
| 3, 6                                   | GND        | 11, 14                                 | GND        |
| 4, 5                                   | NC         | 12, 13                                 | NC         |

Parallel communication port


10. Instructions for use of the display

10.1 Introduction

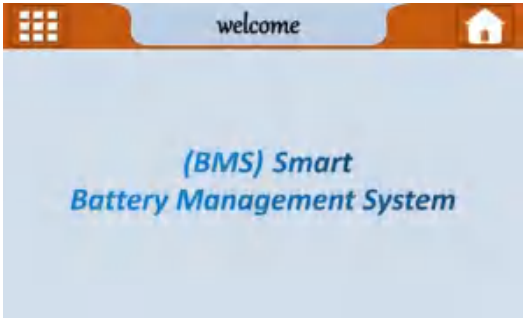

Description: Welcome interface, boot lasts for 3 seconds, used for program preparation, time to communicate with BMS motherboard to exchange data, and then enter the main status interface.

■ Main status page

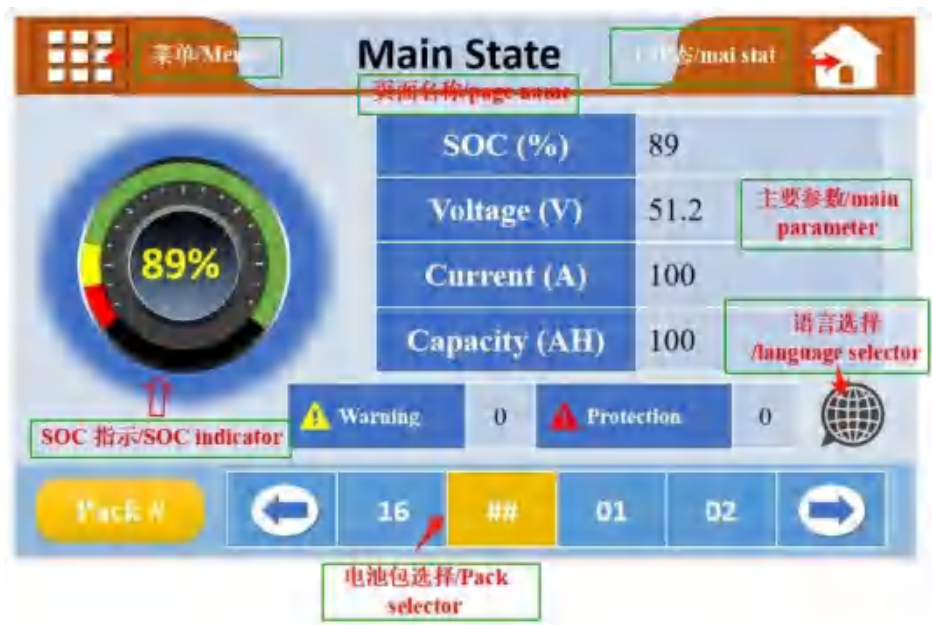


Note: After 3 seconds after the welcome interface is turned on, it will automatically enter this interface; At any time, you will automatically enter this interface after waking up with the screen off;

Icon Description:


|  |                                                             |
|--|-------------------------------------------------------------|
|  | Main menu icon, click to enter the main menu HOME interface |
|  | Main State icon, click to enter the Main State interface    |
|  | System settings/language selection                          |

■ Menu page

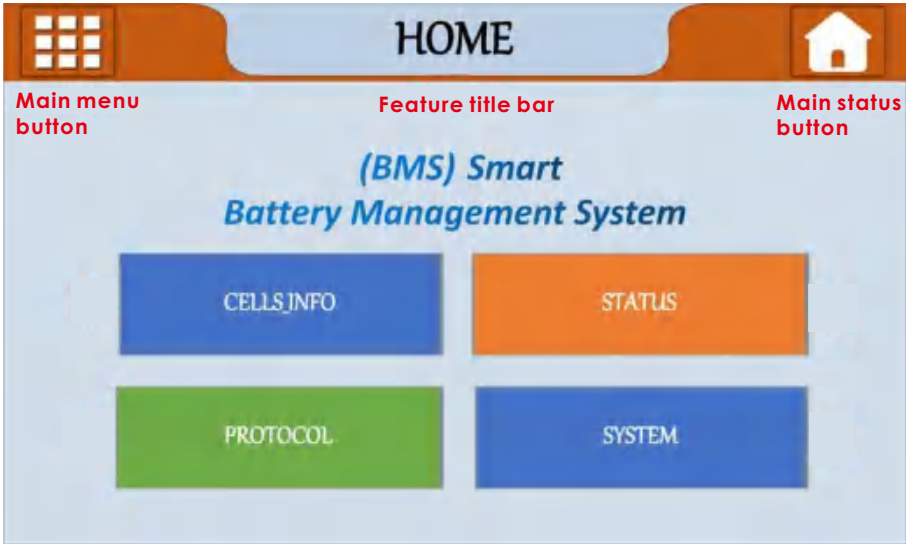


■ Cell page

Voltage:

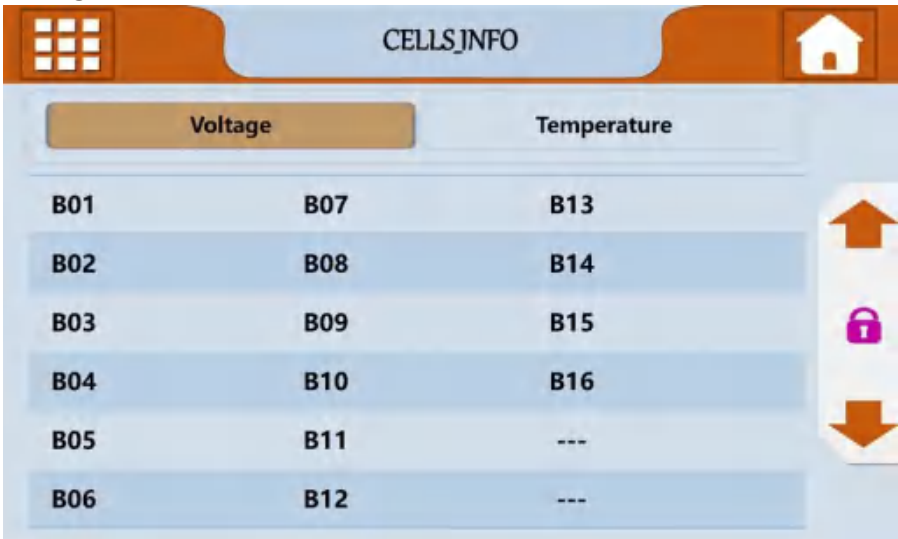

## ■ Cell page

Temperature:

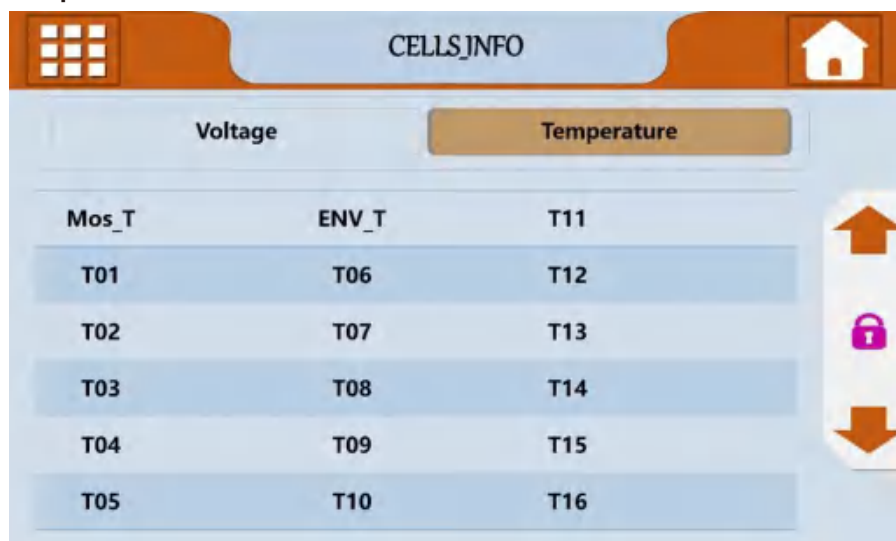

The screenshot shows the 'CELLS\_INFO' page with a grid icon on the left and a home icon on the right. Below the title bar, there are two tabs: 'Voltage' and 'Temperature'. The 'Temperature' tab is selected. The table displays temperature data for Mos\_T, ENV\_T, and T11. The data is organized into three columns: Mos\_T, ENV\_T, and T11. The rows are numbered 1 to 6. On the right side of the table, there are three vertical arrows: an upward arrow, a lock icon, and a downward arrow.

| Mos_T | ENV_T | T11 |
|-------|-------|-----|
| T01   | T06   | T12 |
| T02   | T07   | T13 |
| T03   | T08   | T14 |
| T04   | T09   | T15 |
| T05   | T10   | T16 |

## ■ Agreement selection page

RS485:



The screenshot shows the 'Agreement' page with a grid icon on the left and a home icon on the right. Below the title bar, there are two tabs: 'RS485' and 'CAN'. The 'CAN' tab is selected. The table displays a list of CAN protocols that have been set (default). The list is numbered 1 to 6. On the right side of the table, there are three vertical arrows: an upward arrow, a lock icon, and a downward arrow.

| RS485                                 | CAN                                             |
|---------------------------------------|-------------------------------------------------|
|                                       | <b>CAN protocol that has been set (default)</b> |
| 1、000-PACE CAN TY V1.0-2016.12.16     |                                                 |
| 2、001-PYLON CAN Inverter EMS          |                                                 |
| 3、002-Growatt CAN LV V1.05-2019.08.28 |                                                 |
| 4、010-Victron CAN 2021.01.07          |                                                 |
| 5、015-Schneider V2.0                  |                                                 |
| 6、012-Luxpowertek CAN V1.0-2020.02.11 |                                                 |

## ■ Agreement selection page



Note: Built-in unlock password 82993060

## ■ System Settings page



Note: The protocol list is read from the BMS motherboard, the following is the case, the built-in list of each BMS motherboard shall prevail, change the protocol, the first time you need to change Enter the permission password, the initial password is 82993060, exit the agreement interface, the permission takes effect, modify the agreement again, and need to verify the permission again

## 10.2 Hibernation/shutdown

In the normal operation state, after 3 minutes of keyless operation, the system will enter the hibernation/shutdown state. In the shutdown/hibernation state, tap any position of the color screen, the display will be activated, and the main status interface will be entered, and at the same time, the authorization will be cleared.

## 10.3 Permission description

**There are three levels of permissions:**

- No permissions: You can browse the welcome screen and the main status screen; Restrict the browsing of other cell details and fault alarm details;
- Operator permissions: can browse all interfaces, can select language options, and cannot set and modify agreements;
- Administrator permissions: you can browse all interfaces, you can choose language options, and you can set and modify agreements;
- Protocol permission security: To re-enter the protocol settings page, you need to re-enter the administrator password, and the password entered in the exit protocol interface will be cleared;
- Password: Administrator Password, 82993060, Operator Password, 87654321.

## 10.4 Install and use

Please connect the display to the main control board through a dedicated cable!

# Warranty Card

## CUSTOMER Information

\*Contact Name \_\_\_\_\_  
\*Phone Number \_\_\_\_\_ \*Email \_\_\_\_\_  
Company Name \_\_\_\_\_  
\*Address \_\_\_\_\_  
\*State \_\_\_\_\_ Zip Code \_\_\_\_\_

## PRODUCT Information

\*Module Type \_\_\_\_\_  
\*Serial Number \_\_\_\_\_  
\*Purchase Date \_\_\_\_\_  
\*Faulty Description \_\_\_\_\_

- |                            |     |    |      |
|----------------------------|-----|----|------|
| 1) Can the battery boot?   | Yes | or | No ? |
| 2) Can battery charged?    | Yes | or | No ? |
| 3) Can battery discharged? | Yes | or | No?  |
| 4) Red light on?           | Yes | or | No?  |
| 5) Running light on?       | Yes | or | No?  |

## INSTALLER Information

\*Installer Name \_\_\_\_\_  
Staff Number \_\_\_\_\_  
\*Installing Date \_\_\_\_\_

Please fill the form carefully, and the items marked with "\*" are necessary, Thank you!

\*Customer Signature \_\_\_\_\_ \*Provider Signature \_\_\_\_\_  
\*Date \_\_\_\_\_